

Orienting the SMART Board Interactive Whiteboard

Orientation ensures your touch registers accurately when you use the SMART Board™ interactive whiteboard. If you press the interactive whiteboard with your finger and your cursor appears somewhere other than where you are pressing, orient the interactive whiteboard.

Quick orientation

To orient the SMART Board interactive whiteboard, do the following:

- 1 Press and hold the **On-Screen keyboard** and **control-click** buttons simultaneously until the Orientation screen appears




Pen-tray buttons



Pen-tray buttons

- 2 Begin the orientation process at the upper left-hand corner of the Orientation screen. Press your finger or pen tool firmly on the center of each cross in the order indicated by the white, diamond-shaped graphic.

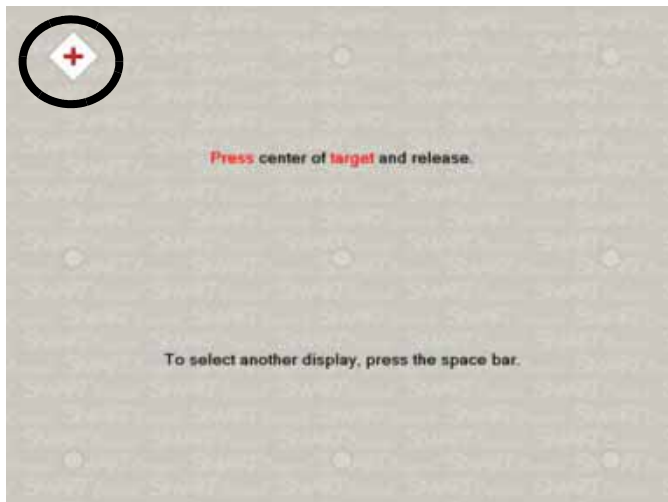

The Orientation screen

TIP: If you are not satisfied with the precision of a particular orientation point while orienting, press one of the pen-tray buttons or the left arrow key on your keyboard to redo the previous orientation point.

Changing orientation settings


Increase the detail of calibration for applications that require more precision.

- 1 Press and hold the **SMART Board Tools** icon in the Dock, then select **Control Panel**
- 2 In the Control Panel window, press **SMART Hardware Settings**



SMART Hardware
Settings

3 The SMART Hardware Settings screen opens. Select **Orientation/Alignment Settings** from the drop-down menu

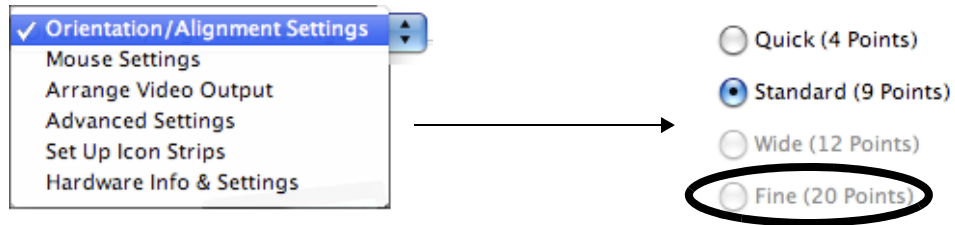

4 Select **Fine (20 Points)** and press **OK** to apply the new orientation and alignment settings

5 In the Control Panel window, press the **Orient** button to begin the orientation process

